



# Stock Tank Hot Tub DIY

BY ANDI BRABIN



**Buildahottub**  
**.com**



**Buildahottub**  
**.com**

## Disclaimer

These Design Notes, Tips and Tricks are supplied for **informational purposes only**. [www.buildahottub.com](http://www.buildahottub.com) and Amandi Holdings Limited assume no responsibility for loss, injury or damage that arises out of misuse of this information.

Hello,

Thanks for downloading this guide and plans from [www.buildahottub.com](http://www.buildahottub.com)

I hope you find it useful. Always happy to hear any feedback that you have so do feel free to drop me a line at [andi@buildahottub.com](mailto:andi@buildahottub.com)

Happy Hot Tubbin'

Andi



# Table Of Contents

<b>Structure</b>	<b>3</b>
<b>Plumbing</b>	<b>4</b>
<b>Recommendation</b>	<b>5</b>
<b>Inward Flow</b>	<b>5</b>
<b>Outward Flow (into the Hot Tub)</b>	<b>7</b>
<b>Pipe Rings</b>	
<b>The Blower</b>	<b>8</b>
<b>Plumbing Diagrams</b>	<b>9</b>
<b>No Jets - Heating and Filtration Only</b>	
<b>4 Jets</b>	
<b>8 Jets</b>	
<b>16 Jets</b>	
<b>How to Build the Ultimate Control Room for your Hot Tub</b>	<b>17</b>
<b>Assembly Steps</b>	<b>20</b>

<b>Assembly Guidance</b>	<b>40</b>
<b>Hole Cutting.</b>	42
<b>Fitting the Jet Bodies</b>	44
<b>Fitting the Drains</b>	47

## Structure

The Hot Tub is formed from a stock tank the size of which is to be chosen by the client. If you have not yet purchased one, the best place and cheapest place is Tractor Supply. The plumbing is designed to take a tub up to approximately 10'-12' in diameter.

The position of the jets is up to the client. The design is flexible so that the jets can be placed anywhere around the Stock Tank.


The Height of the jets is up to the client. Again, this can be adjusted on site to suit the Stock Tank.

The Lower Drains should be placed at the bottom of the Stock Tank. Again, the position is flexible as these are not for draining the tub but are for water intake into the pump. In terms of spacing between the two drains, again flexible. It is advised to have at least 1' between the two drains.

The "Control Room" needs to be covered to keep out the weather and the elements. The components are not waterproof. It should be BELOW the waterline.

## Plumbing

This is the main control SKID and comprises of a +/- 2HP dual speed (circulation and High) Pump, Blower, Spa Control Pack (including +/- 4KW Heater) and 25 SQ Ft Inline Filter.

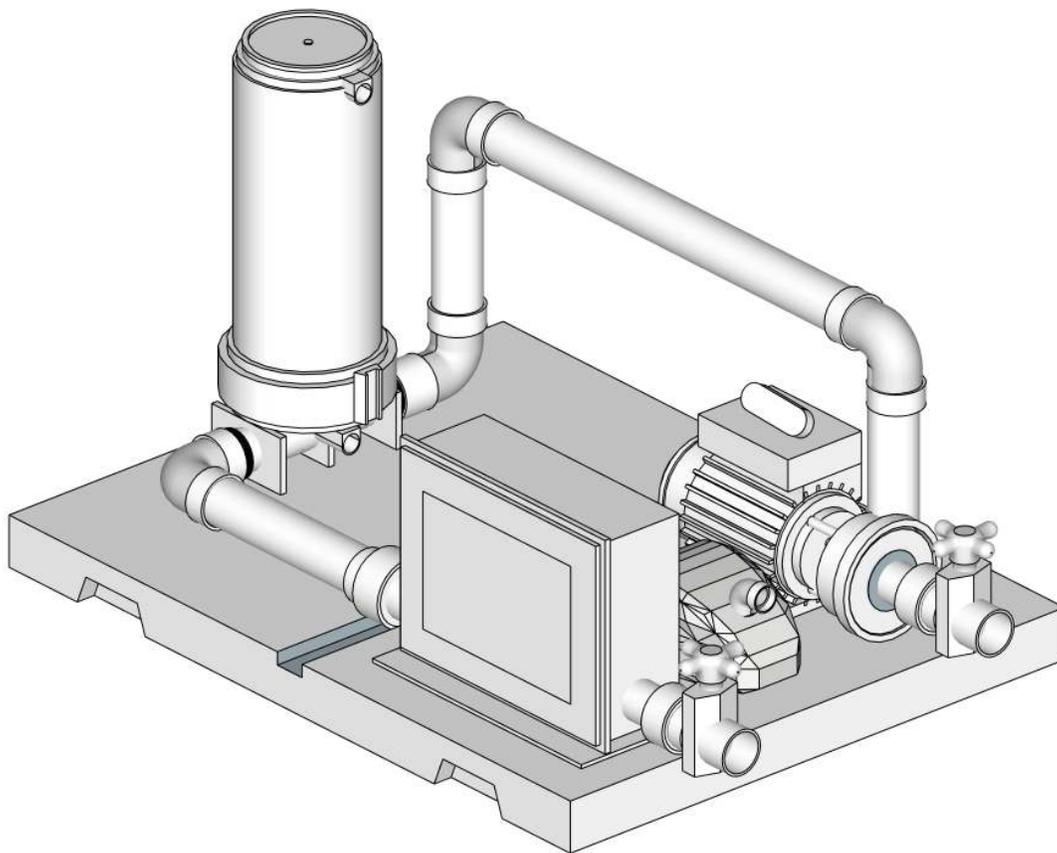

There is a non-return valve placed onto the blower to ensure water cannot pass into the blower. The shape of the blower may vary from the drawing above but the functionality is the same.

There are isolation taps on both ends of the system, Spa Control pack and Pump. This is so the filter and parts can be isolated for maintenance without the need for draining the Tub.

This SKID requires a 40A supply of electricity to make it function correctly at 240V and 60Hz.

You can read more about the electrical requirements here -

<https://buildahottub.com/a-guide-to-hot-tub-electrics/>

## Recommendation

An IP65 40AMP Rotary Isolator Switch is also recommended so that the hot tub can be isolated in an emergency or for service work. This is simply a rotary on/off switch but should be sited more than 6ft from the hot tub so that bathers cannot be in the hot tub whilst touching the switch.



## Inward Flow

## Assistance

If you need assistance during you build please email [andi@buildahottub.com](mailto:andi@buildahottub.com), call on +1 352 765 9389. I am always happy to help.